
 









04 20 89 011 00



| | | |
|---|-------------------------------|--------------------|
|  | Chrom | 04 20 89 011 00-00 |
|  | Platin gebürstet | 04 20 89 011 00-06 |
|  | Platin | 04 20 89 011 00-08 |
|  | Messing (23kt Gold) | 04 20 89 011 00-09 |
|  | Weiß matt | 04 20 89 011 00-10 |
|  | schwarz | 04 20 89 011 00-13 |
|  | Messing gebürstet (23kt Gold) | 04 20 89 011 00-28 |
|  | Rot | 04 20 89 011 00-29 |
|  | Schwarz matt | 04 20 89 011 00-33 |



Griff 70 x 70 x 43 mm - Chrom

ERSATZTEILE

04 20 89 011 00



Griff 70 x 70 x 43 mm - Chrom

ERSATZTEILE

04 20 89 011 00