

04 20 89 011 00



|                                                                                   |                               |                    |
|-----------------------------------------------------------------------------------|-------------------------------|--------------------|
|  | Platin                        | 04 20 89 011 00-08 |
|  | Chrom                         | 04 20 89 011 00-00 |
|  | Platin gebürstet              | 04 20 89 011 00-06 |
|  | Messing (23kt Gold)           | 04 20 89 011 00-09 |
|  | Weiß matt                     | 04 20 89 011 00-10 |
|  | Schwarz                       | 04 20 89 011 00-13 |
|  | Messing gebürstet (23kt Gold) | 04 20 89 011 00-28 |
|  | Rot                           | 04 20 89 011 00-29 |
|  | Schwarz matt                  | 04 20 89 011 00-33 |



Griff 70 x 70 x 43 mm - Platin

ERSATZTEILE

04 20 89 011 00



Griff 70 x 70 x 43 mm - Platin

ERSATZTEILE

04 20 89 011 00