


 












Zugstange für Umstellung Ø 15 x 140,5 mm - Chrom

ERSATZTEILE

04 31 09 012 00



	Chrom	04 31 09 012 00-00
	Gold (23,9kt)	04 31 09 012 00-01
	bronze	04 31 09 012 00-02
	chrom edelmatt	04 31 09 012 00-05
	Platin gebürstet	04 31 09 012 00-06
	roh vernickelt	04 31 09 012 00-07
	Platin	04 31 09 012 00-08
	Messing (23kt Gold)	04 31 09 012 00-09
	Weiß matt	04 31 09 012 00-10
	Dark Chrome	04 31 09 012 00-19
	Light Gold gebürstet	04 31 09 012 00-27
	Messing gebürstet (23kt Gold)	04 31 09 012 00-28
	Schwarz matt	04 31 09 012 00-33
	Chrom gebürstet	04 31 09 012 00-93
	Dark Platinum gebürstet	04 31 09 012 00-99



Zugstange für Umstellung Ø 15 x 140,5 mm - Chrom

ERSATZTEILE

04 31 09 012 00



Zugstange für Umstellung Ø 15 x 140,5 mm - Chrom

ERSATZTEILE

04 31 09 012 00