




Abdeckung für Zwei-Drei-Wegeumstellung Griffdeckel Ø 47 x 12 mm - Messing
(23kt Gold)

ERSATZTEILE

09 20 97 015



	Messing (23kt Gold)	09 20 97 015-09
	Chrom	09 20 97 015-00
	Gold (23,9kt)	09 20 97 015-01
	chrom gebürstet (04)	09 20 97 015-04
	chrom edelmatt	09 20 97 015-05
	Platin gebürstet	09 20 97 015-06
	Platin	09 20 97 015-08
	Weiß matt	09 20 97 015-10
	weiß	09 20 97 015-12
	schwarz	09 20 97 015-13
	Gold gebürstet (23,9kt)	09 20 97 015-14
	rot (15)	09 20 97 015-15
	Dark Brass matt	09 20 97 015-16
	Dark Bronze matt	09 20 97 015-17
	Messing gebürstet (23kt Gold)	09 20 97 015-28
	Rot	09 20 97 015-29
	Orange	09 20 97 015-30
		09 20 97 015-32
	Schwarz matt	09 20 97 015-33
	Platin / Platin gebürstet	09 20 97 015-36
	chrom satin	09 20 97 015-41
	Bronze gebürstet	09 20 97 015-42
	aluminium (45)	09 20 97 015-45
	cyprum matt	09 20 97 015-56
	Dark Platin gebürstet	09 20 97 015-99



Abdeckung für Zwei-Drei-Wegeumstellung Griffdeckel Ø 47 x 12 mm - Messing
(23kt Gold)

ERSATZTEILE

09 20 97 015



Abdeckung für Zwei-Drei-Wegeumstellung Griffdeckel Ø 47 x 12 mm - Messing
(23kt Gold)

ERSATZTEILE

09 20 97 015