


Rosette für Mischer 80 x 80 x 9 mm - Chrom

ERSATZTEILE

09 27 78 048

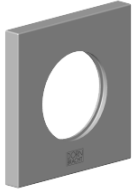

	Chrom	09 27 78 048-00
	Platin gebürstet	09 27 78 048-06
	Platin	09 27 78 048-08
	Dark Brass matt	09 27 78 048-16
	Dark Bronze matt	09 27 78 048-17
	Light Gold gebürstet	09 27 78 048-27
	Messing gebürstet (23kt Gold)	09 27 78 048-28
	Schwarz matt	09 27 78 048-33
	Bronze gebürstet	09 27 78 048-42
	Champagne gebürstet (22kt Gold)	09 27 78 048-46
	Champagne (22kt Gold)	09 27 78 048-47
	Chrom gebürstet	09 27 78 048-93
	Dark Platinum gebürstet	09 27 78 048-99



Rosette für Mischer 80 x 80 x 9 mm - Chrom

ERSATZTEILE

09 27 78 048



Rosette für Mischer 80 x 80 x 9 mm - Chrom

ERSATZTEILE

09 27 78 048