





INSTALLATION MANUAL




MONTAGEANLEITUNG
INSTRUCTIONS DE MONTAGE
ISTRUZIONI PER IL MONTAGGIO





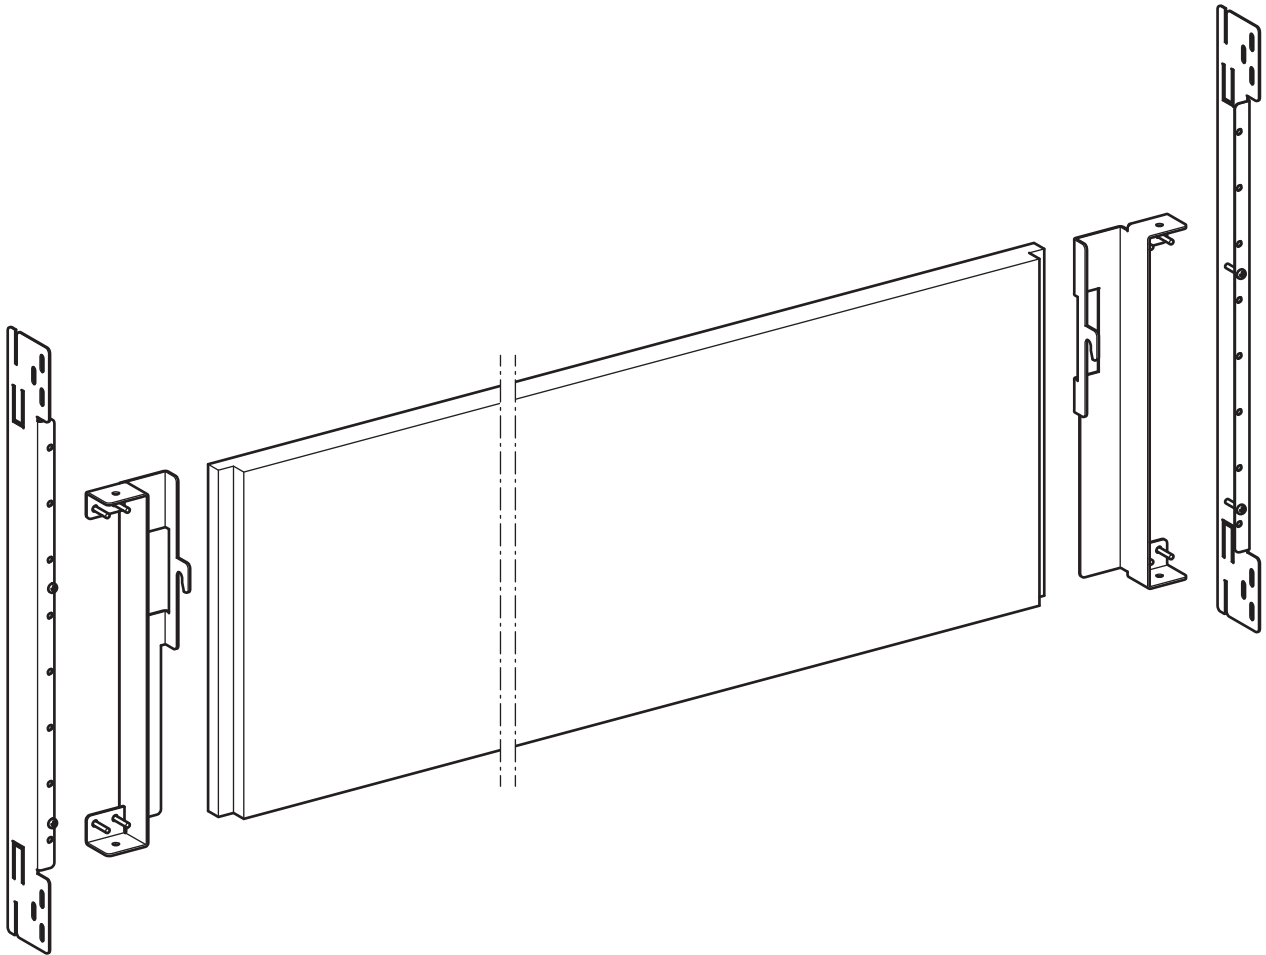


970.221.00.0(01)


**KNOW
HOW**
INSTALLED

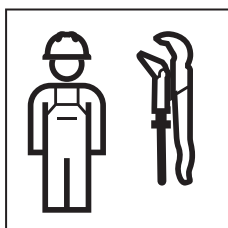

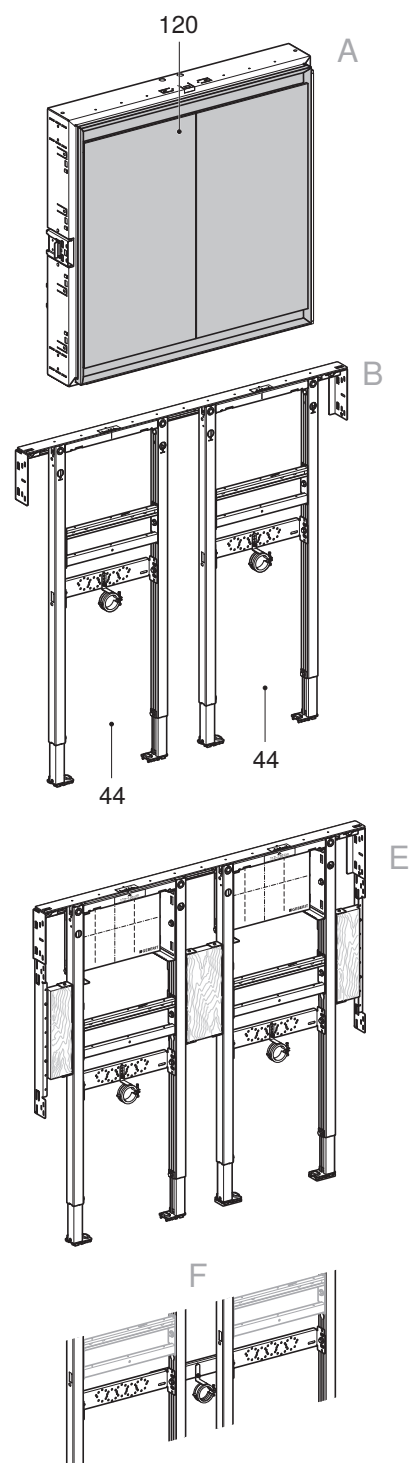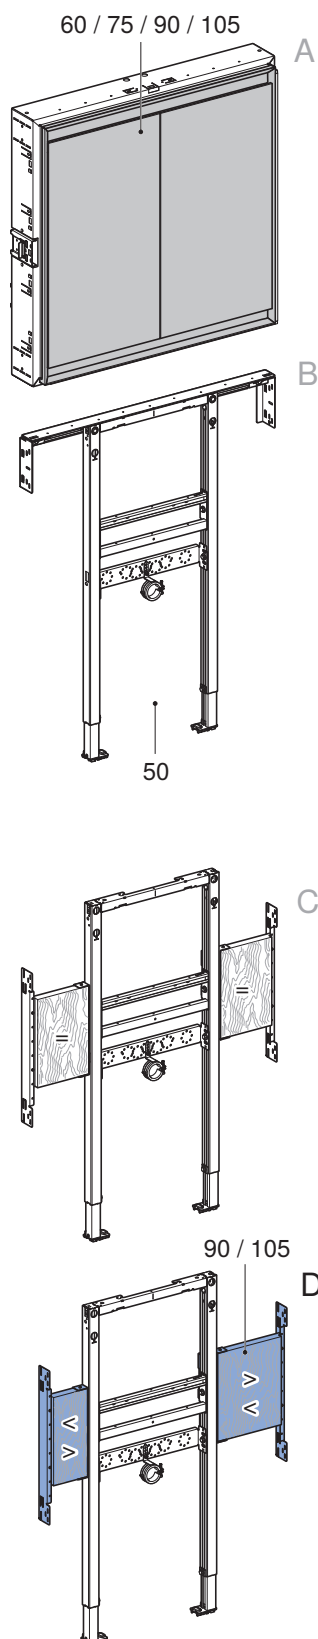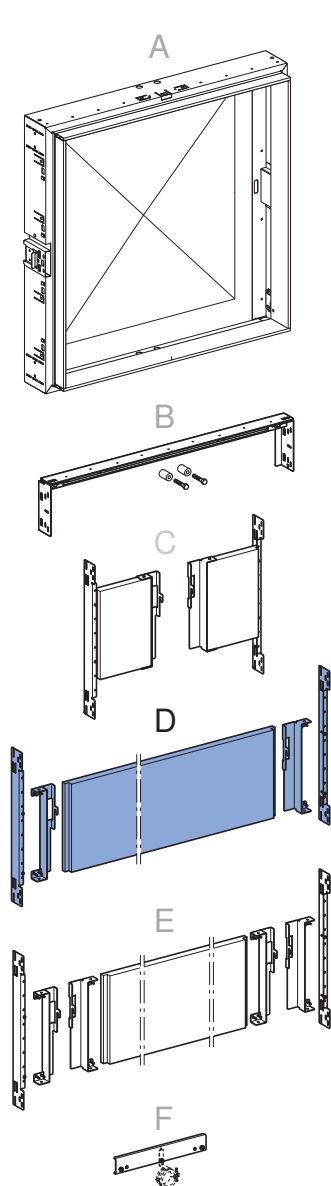


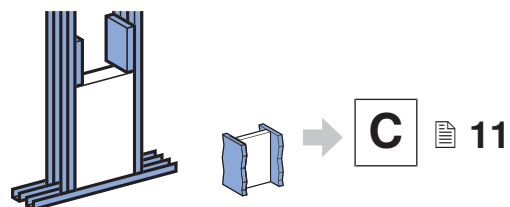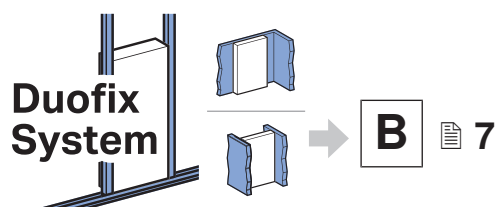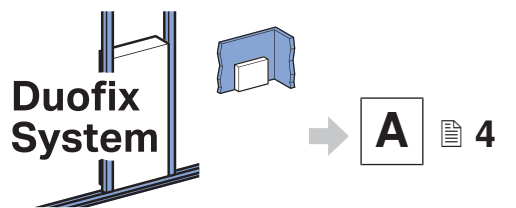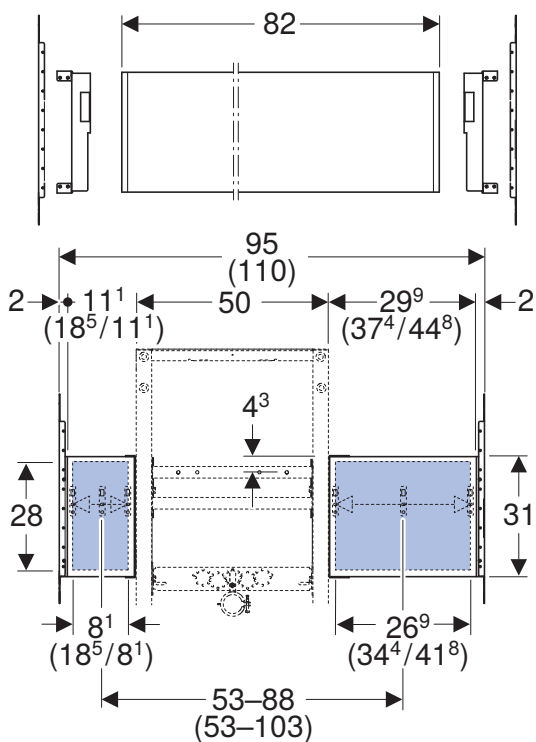


A

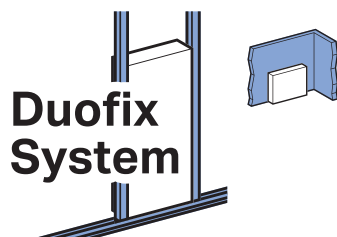




✓

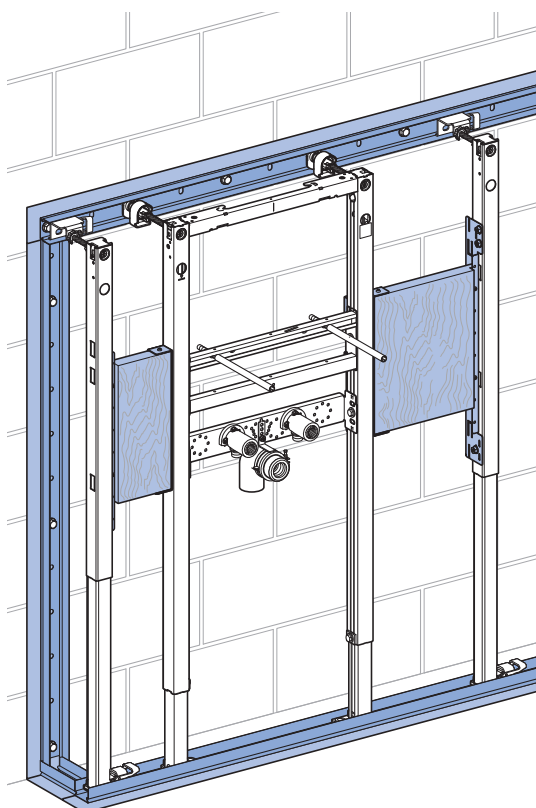




1

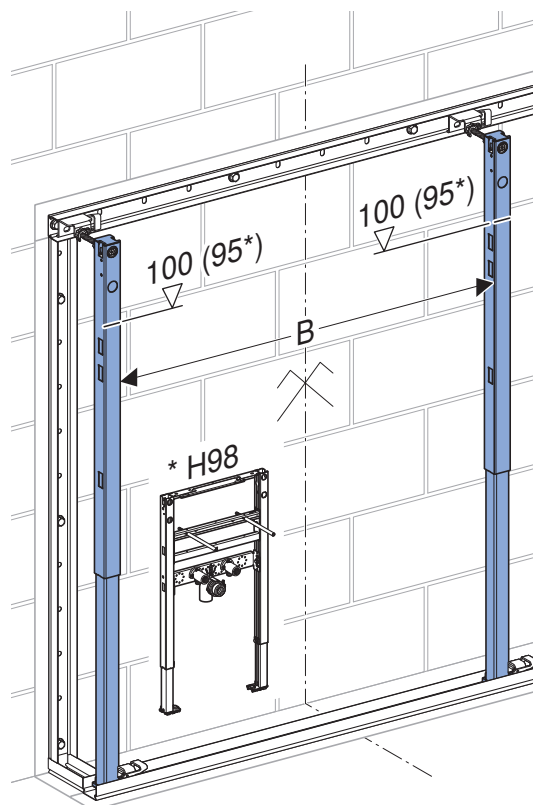







2

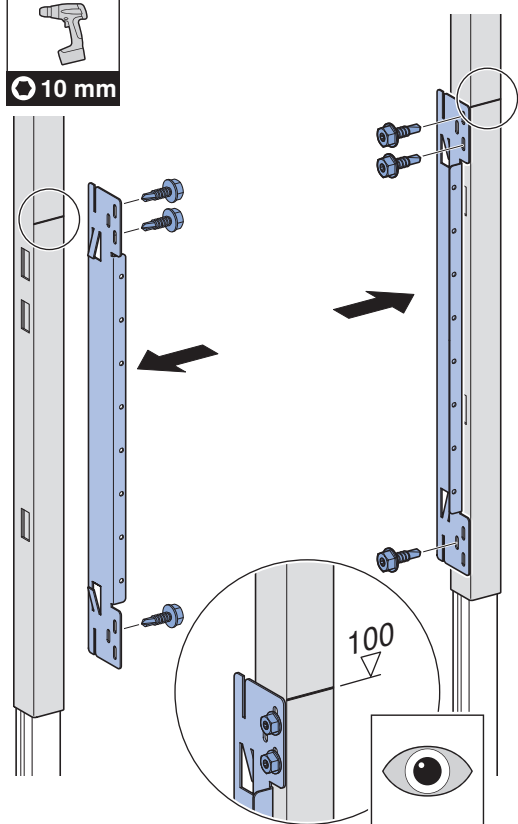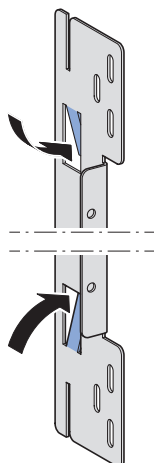


3

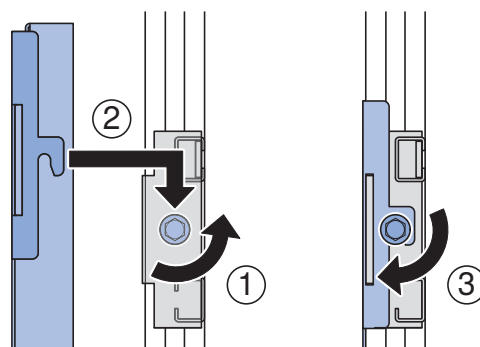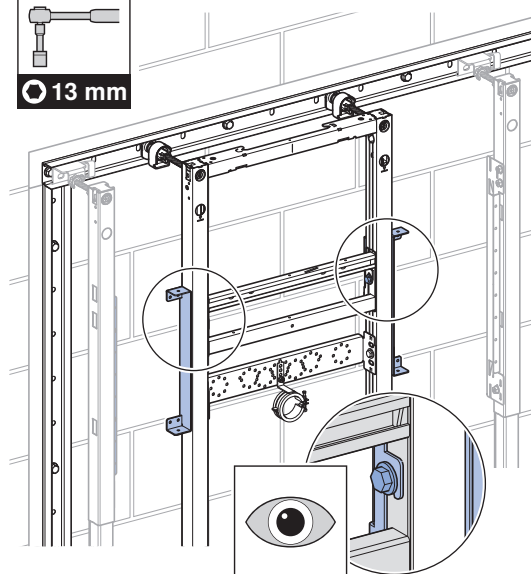



4

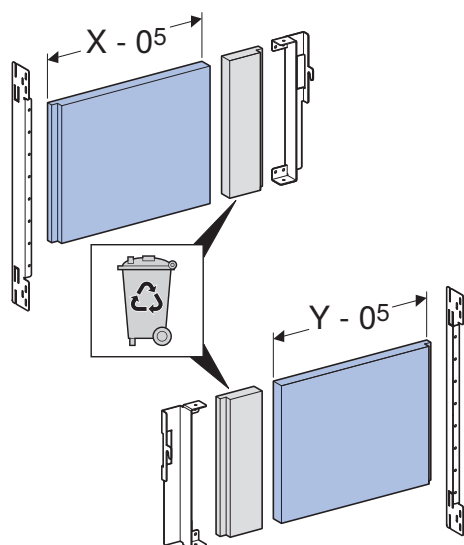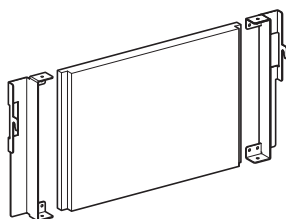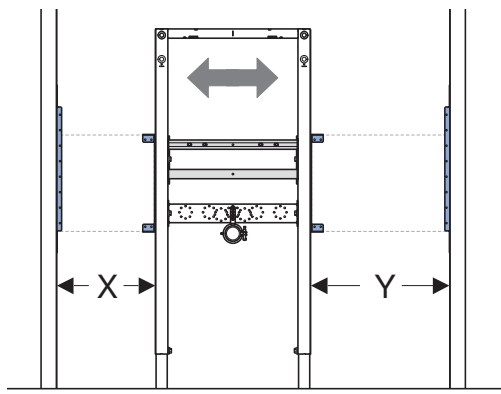


5

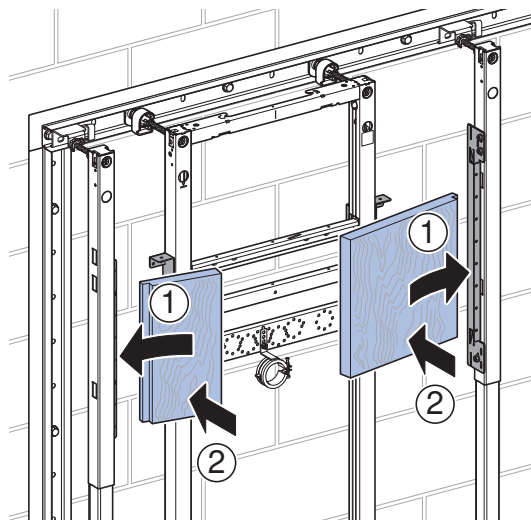


6

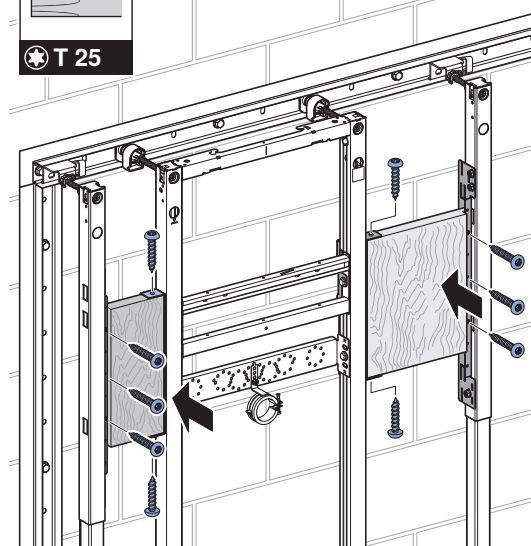


B

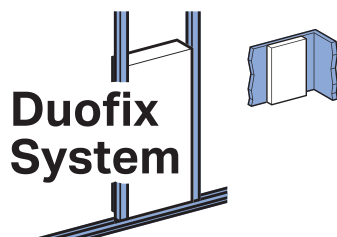




✓

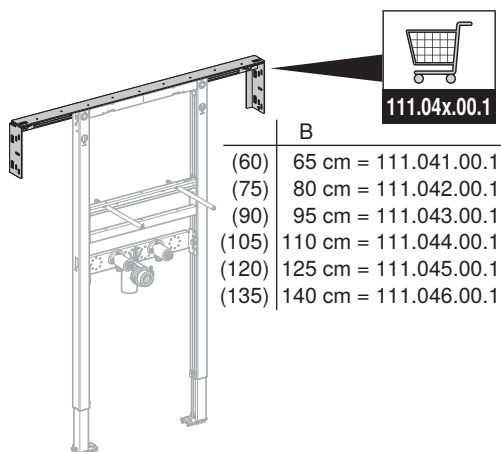



1

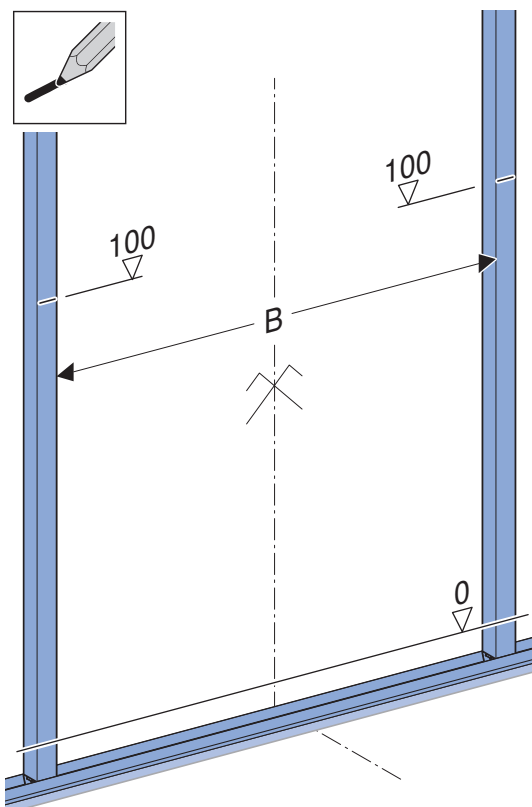


2

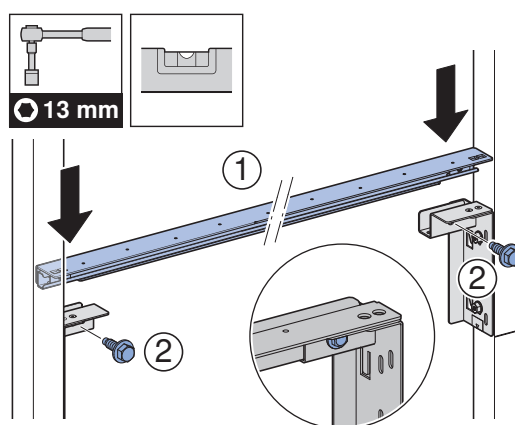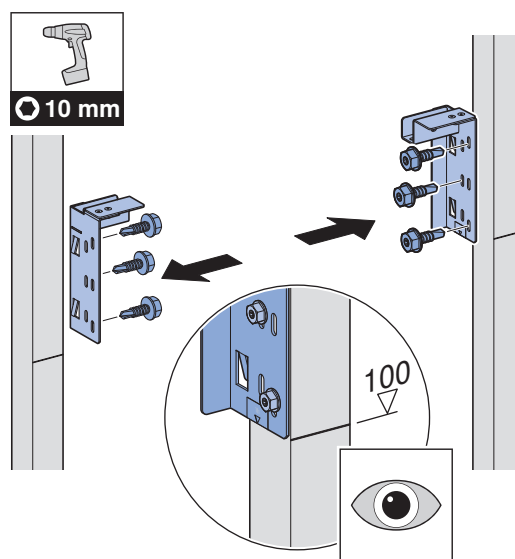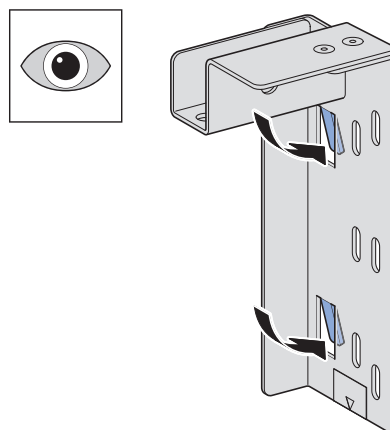


3

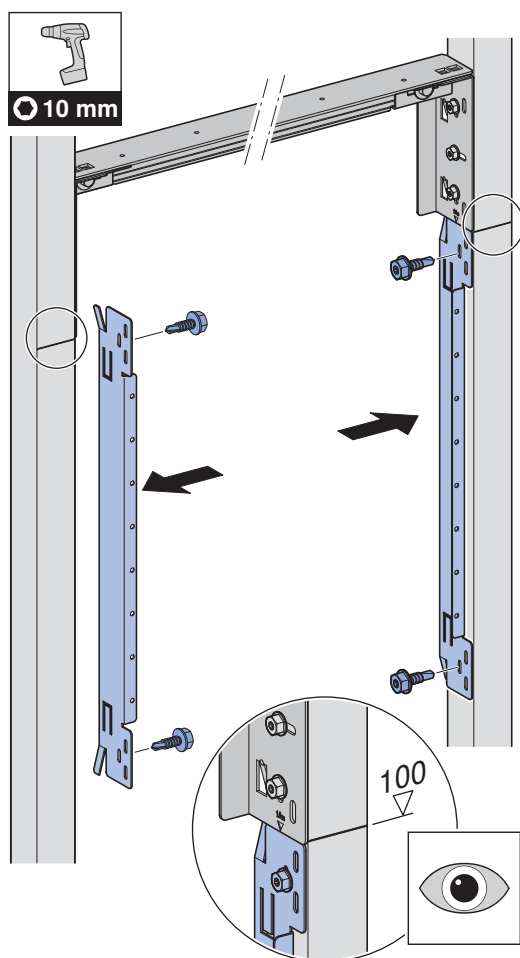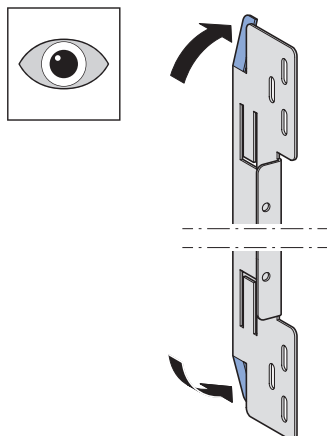


4

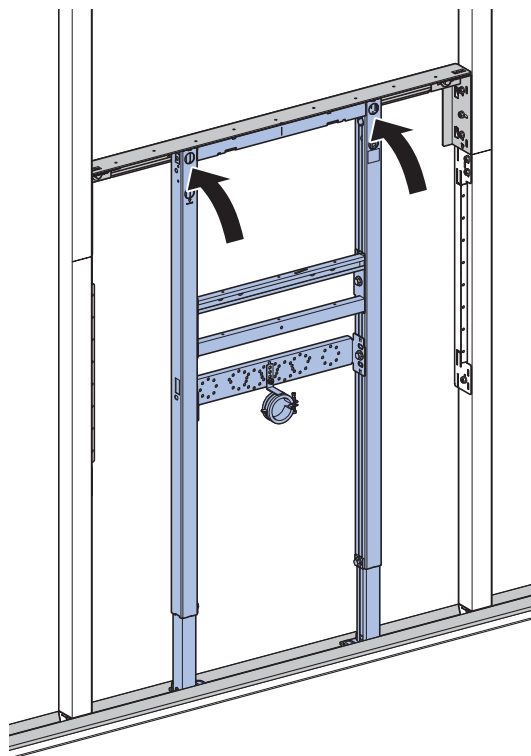


5

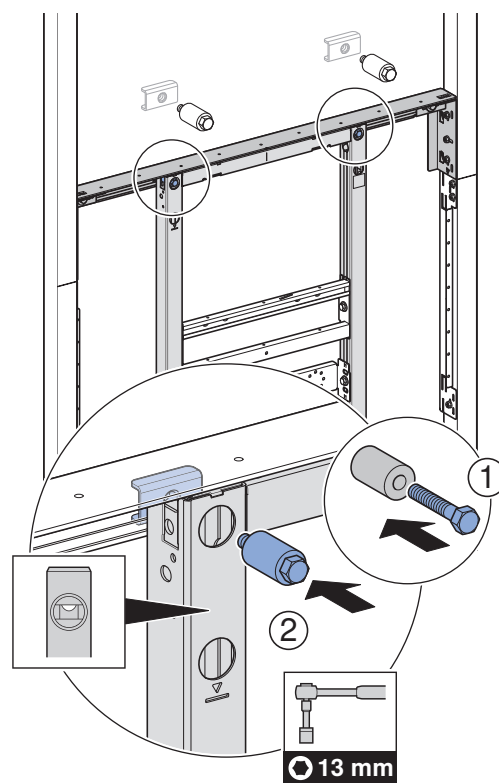



6

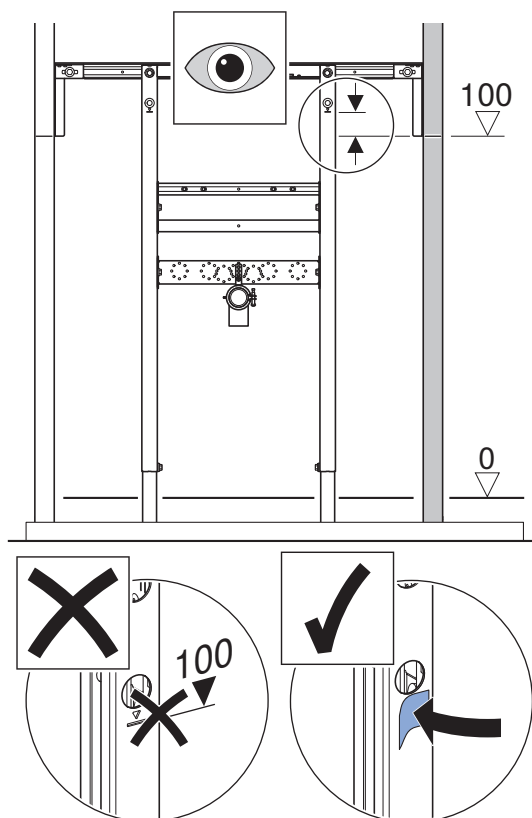


7

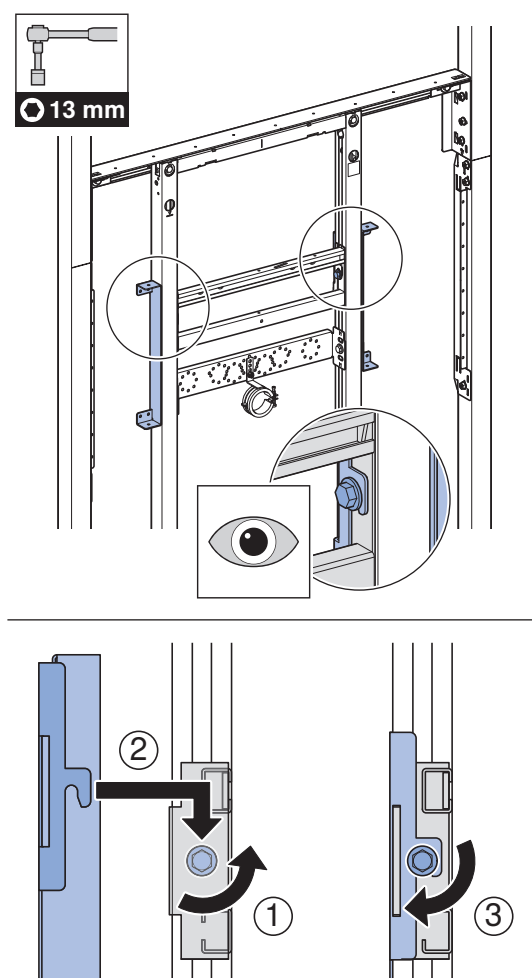



8

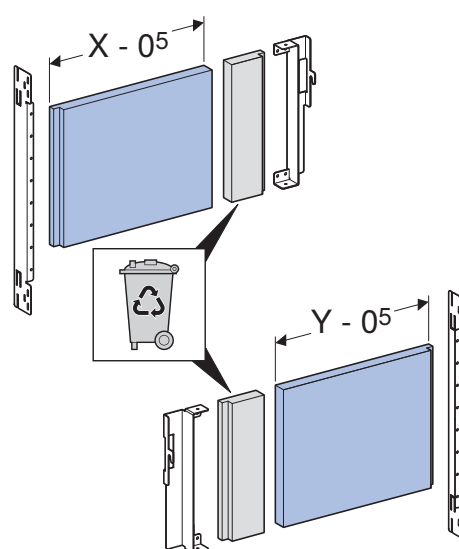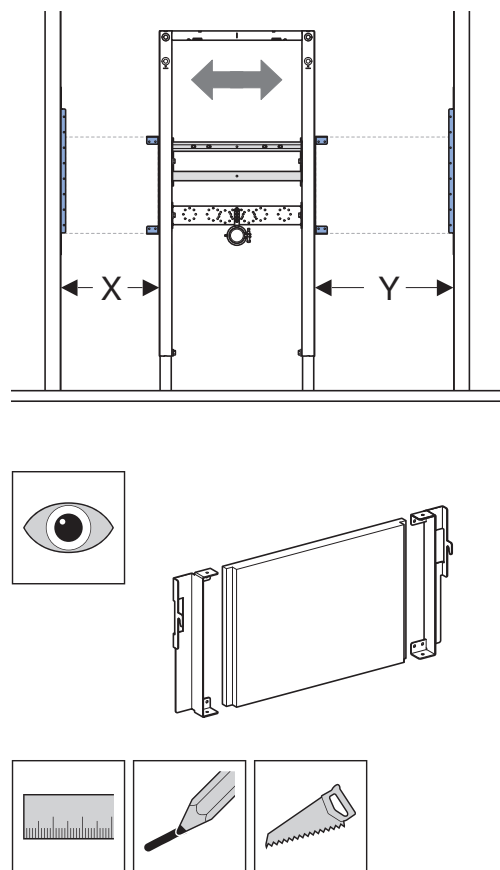


9

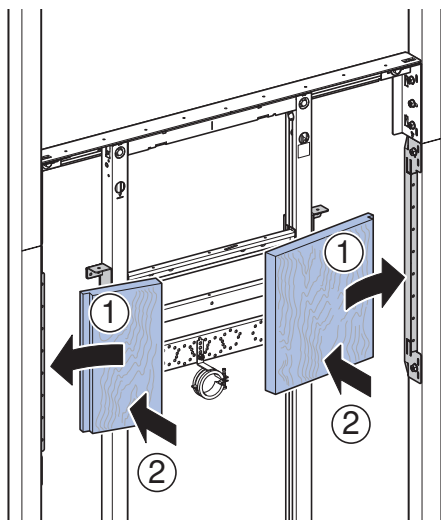


10

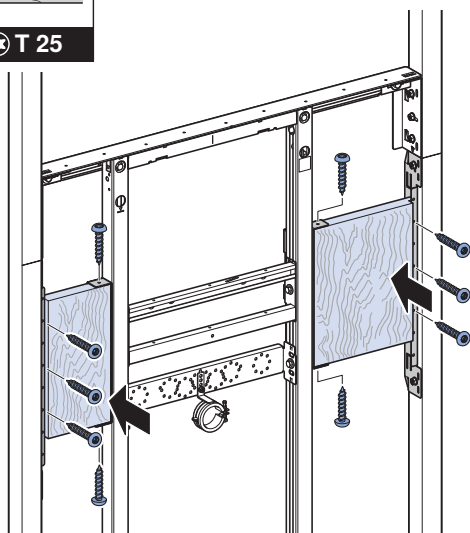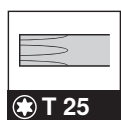

C

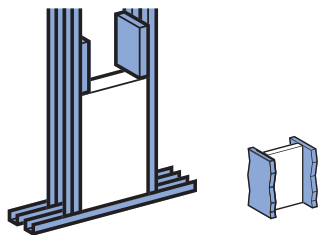


✓

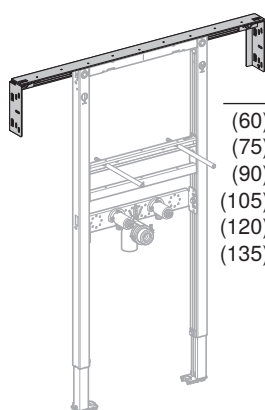


	B
(60)	65 cm = 111.041.00.1
(75)	80 cm = 111.042.00.1
(90)	95 cm = 111.043.00.1
(105)	110 cm = 111.044.00.1
(120)	125 cm = 111.045.00.1
(135)	140 cm = 111.046.00.1




1

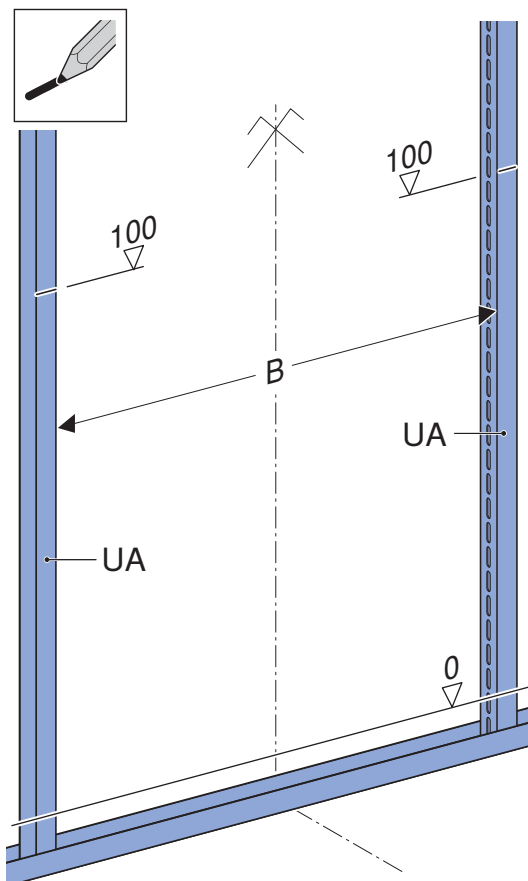

i

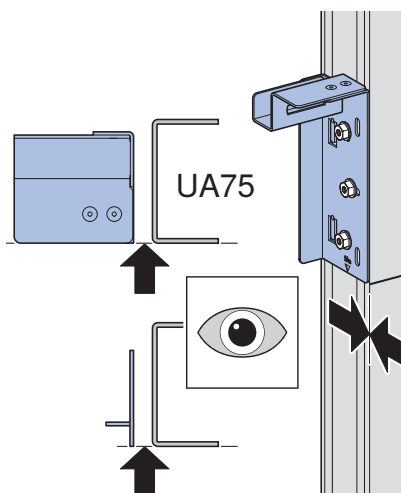

2

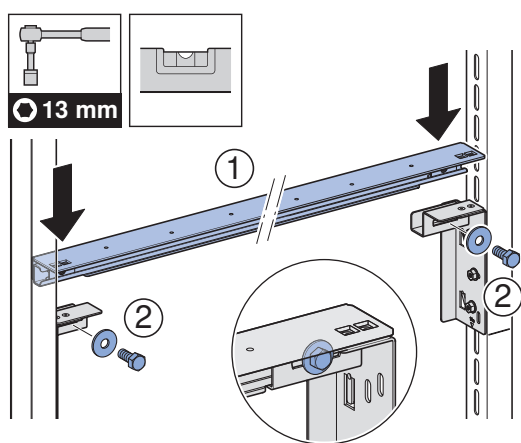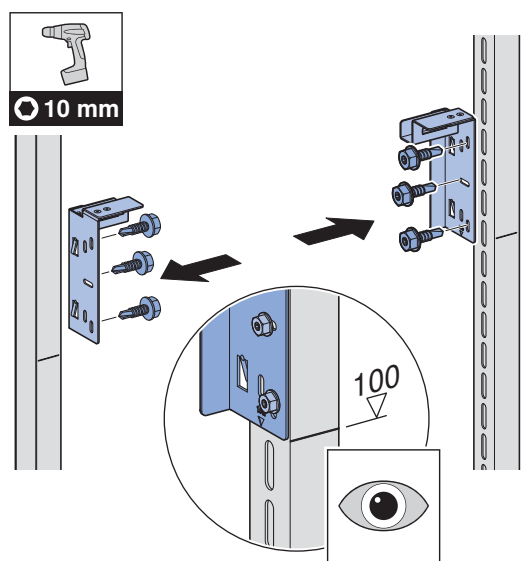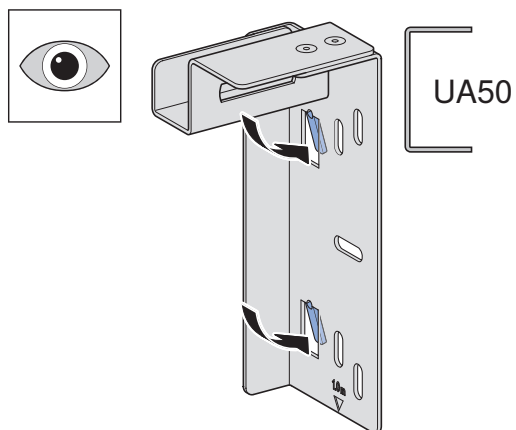

3





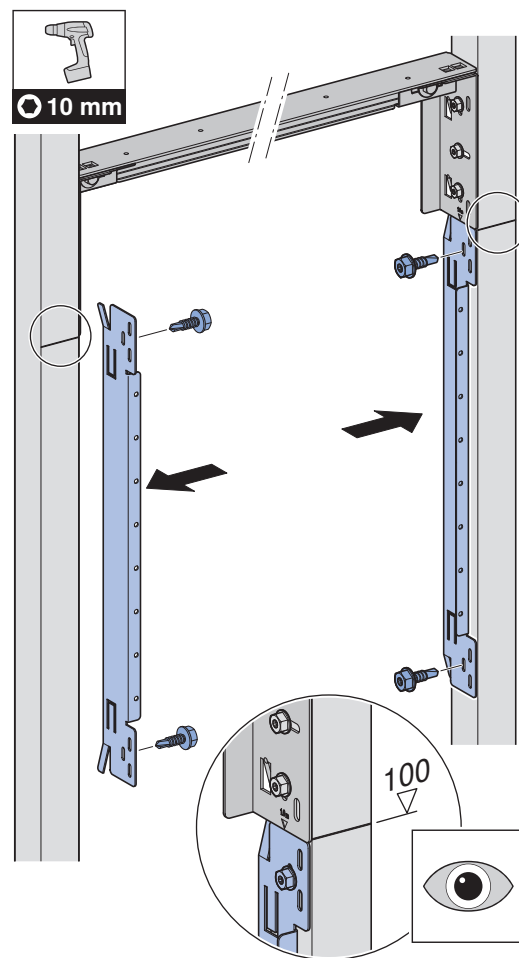


Diagram illustrating the installation of the window frame. The legend indicates the use of a pencil for marking and a hammer for driving. The dimensions for the frame are given as $\varnothing 10 \text{ mm}$ and 13 mm . The main diagram shows the frame being positioned and secured with screws into the wall.








8

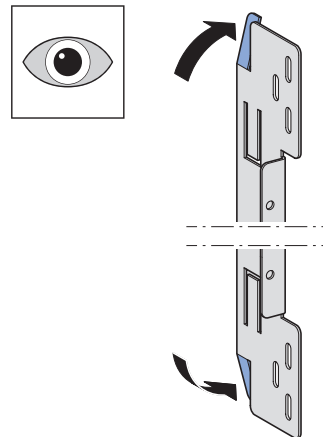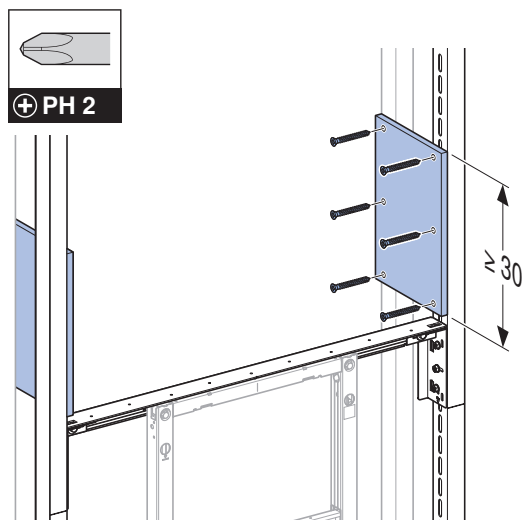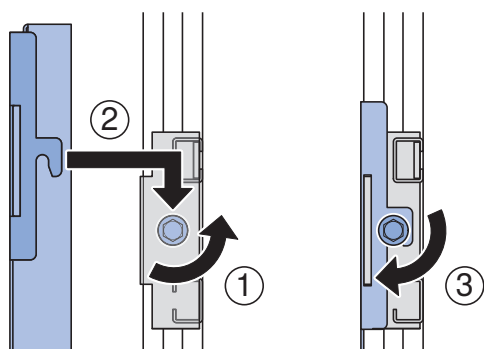


9

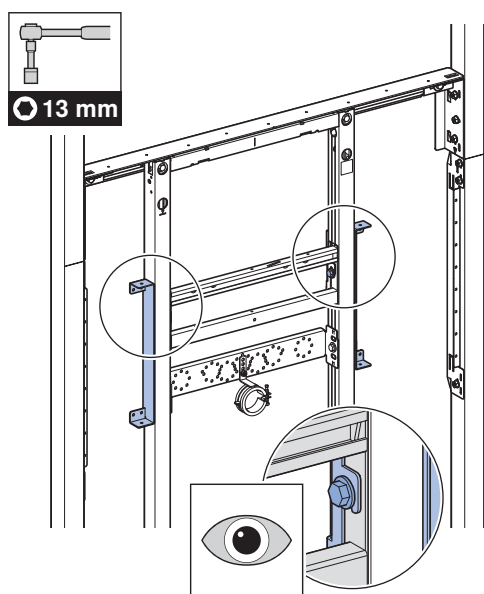



10

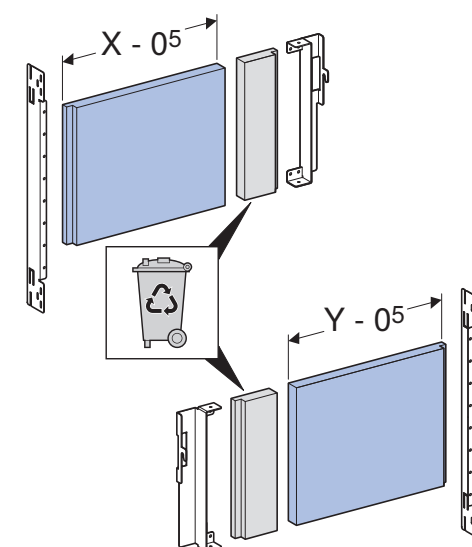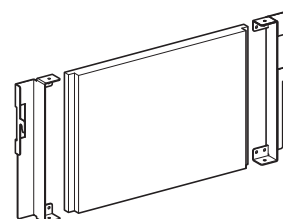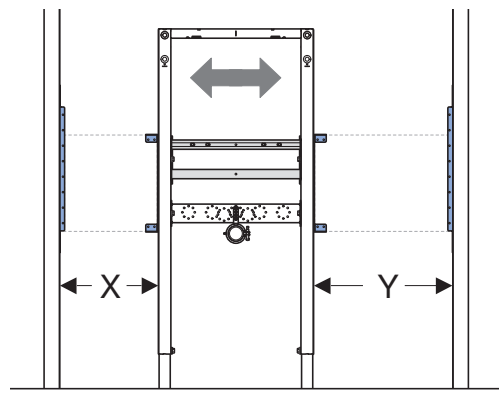

11

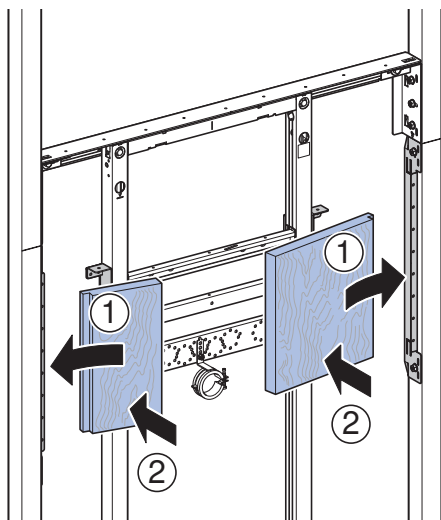

12

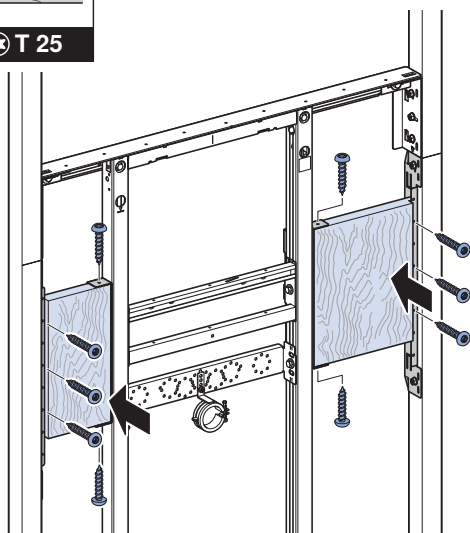



Geberit International AG
Schachenstrasse 77, CH-8645 Jona
documentation@geberit.com
www.geberit.com